



MAIN FEATURES

- Pulsed wave technology
- · Ceramic tube insert
- Air cooled
- Unique energy recovery module
- · Rugged and light control unit
- Safety first, x-ray start with 2 buttons
- Full automatic preheating
- · Works on power generator
- · Very stable output
- · Low consumption





KEY ADVANTAGES

- · Very reliable
- · Ergonomic guard rings
- Temperature pressure switch
- · Full automatic preheating process
- · Low power requirement
- · Cables with reduced size and weight
- Can be delivered with our 900g Hand-X including a Geiger-Müller detector
- CANON mil. metallic connectors
- · Steadiness & Sturdinesss


MOST COMMON APPLICATIONS

- Oil & Gas
- · Shipyard building & Building sites
- · Petrochemical & Power plants
- Foundries
- Railway parts
- Boiler or pressure vessels manufacturers

Balteau NDT is known for its unique and unequalled engineering and manufacture of portable equipment. The CERAM 35 is the result of the latest evolution of electronic and physics of X-rays. It has been engineered to meet and exceed your needs for now and the future.

The CERAM 35 is delivering 300 kV and 5 mA with a duty cycle of 100% for an incredible image contrast even at full power. Thanks to a purposely designed tubehead and driving electronics, the CERAM 35 is offering to the user both duty cycle and an enormous power to fit any important requirements.



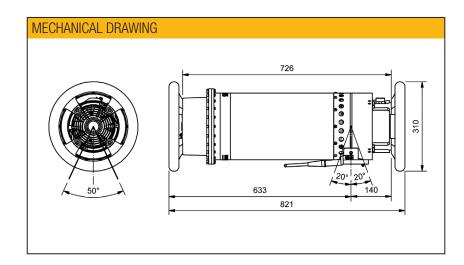

Gas insulation and right components selection have succeeded in producing one of the lightest 300kV in the market. The unit is extremely versatile and is confirming our reputation of builders for machines that are really made for field inspection.

INTERNATIONAL

- CE certified
- NFC74-100 LCIE Certified

Specifications	Units	CERAM35
High voltage range:	kV	100 - 300
Tube current range:	mA	0,5 - 5
Maximum anode power dissipation:	Watt	1500
Beam angle:		40°
Focal spot size (IEC336):	mm	2,5 x 2,5
Steel penetration at max (*):	mm	58
Max recommended temp.:	°C	50°
Temperature switch:	°C	70°
Inherent filtration:	mm (Be)	1
Anode cooling type:		Air
Duty cycle:	%	100
Mains:	V	180 - 260
Weight (without rings):	Kg	29
Tubehead:		Ceramic
Control unit:		CF2000 or Hand-X

^{*} FFD= 700mm/Film Carestream Industrex AA400/D=2.0/t=10min.



CF2000

kV min step: **1** mA min step: **0,1**

Time min step: 1 sec up to 99min 59sec
Memories: 100 last exposure/memories
Display: 4 lines, green back lighting

Display: 4 lines, gree
 Mains: 170-260 V
 Weight: 12,5kg

STANDARD EQUIPMENT

- · Internal pressure gauge
- Heavy duty lock type connector
- 20m connecting cable for control unit
- 10m power cable
- · Cradle with heavy duty hand rings
- Holder for centering device filter & diaphragm
- Bag for accessories



Hand-X (Wireless remote control)

• kV min step: 1

mA min step: **0,1**

Time min step:
 Memories:
 Display:
 1 sec up to 99min 59sec
 100 last exposure/memories
 4 lines, green back lighting

Battery: 8h charge capacity

• Weight: **900g**

OPTIONAL EQUIPMENT

- Lead shutter
- AVARA/P
- · Warning flashing light & repeater
- Transport case
- Cradle & 4 legs adjustable stand
- · Hydraulic stand
- 100-260 V adapter

Produced by:

Balteau NDT

Rue Voie de Liège, 12 B-4681 Hermalle Sous Argenteau Belgium

www.**balteau**.com balteau@**balteau**.com Tel. +32 (0) 4 374 75 75 Fax +32 (0) 4 374 75 85

Distributed by: