BALTOGRAPH TSD100/0



www.balteau.com


BALTOGRAPH TSD100/0

	14	
ane sur and a sur a	~ 1º	
anesu /		
	000000	
	Dalloau hallean	
17:		
1 Store		
au com ball		
Max high voltage:	100 kV	
Nominal power:	600 W	
Focal spot size (EN12543	3): 2.0 mm	
Beam angle:	40°	
Target angle:	20°	
Inherent Filtration (mm):	0,8 +/- 0.1 Be	
Anode cooling type:	Water	
Cooling flow rate:	4I/min	
Leakage:	2,5mSv/h@1m	
Max current:	24 mA	
Weight :	3,5 kg	
	CON CONTRACTOR	
Tubehead:	Metal Ceramic	

The TSD 100-0 is a universal Monopolar tube for light alloys, composites or for small to medium steel thicknesses. This light tube allows you to reach the power of 600 W. The outside diameter of the housing is smaller than 100 mm. This is the ideal solution for applications even with tiny space.

The tube shielding is internal and reduces the radiation leakage to less than 1 R/h @ 1 meter as required by International standards. In and out fluid inlets are mounted with universal connectors while the HV plug cone is a R10.

This tube can be used with all brands of generators provided that the load curves can be adapted. See our specialists if you intend to connect this tube to another unit than a BALTEAU.

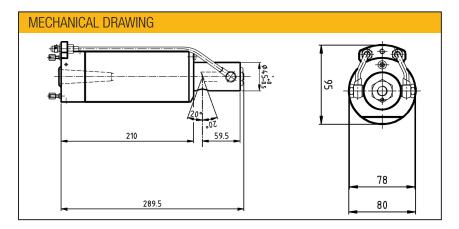

Specifications

Max. High voltage	kV	100	Nominal power	W	600
Tube type		Metal Ceramic	Inherent filtration	mm	0.8 +/- 0.1 Be
Beam angle		40°	Target angle		20°
Cooling mode		Water	Leakage *	mSv/h @1m	2,5
HV Connector		R10	Cooling flow rate	l/min	4
Part number		04840610	Weight	Kg	3,5


Sm	all Focal		La	rge Focal	
Max. Current @ kV Max.	mА	6	Max. Current @ kV Max.	mА	-
Focal spot EN12543	d	2.0 mm	Focal spot EN12543	d	-
Max. Current	mА	14	Max. Current	mA	-

* Leakage radiation max at 1m in mSv/h at nominal kV

All specifications are non contractual and are subject to change without prior notice

BALTOGRAPH **TSD100/0**



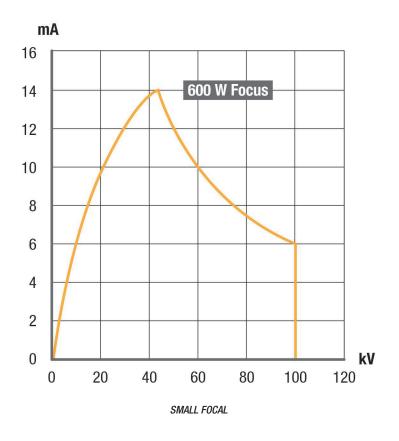

Load curves are indicative as they display the theoretical capacity of the target that may be modified by the HV generator connected and/or by user's settings. Please consult our engineers for up to date information and data related to your generator.

Part designation Fitting for water hose connectors d=8 and d=12mm.	Part designation Quick flanges with key Tube Accessories Support Lead diaphragm Tube collimator
Contact details Balteau NDT Rue Voie de Liège, 12 B-4681 Hermalle Sous Argenteau Belgium	Distributed by:
www. balteau .com balteau@ balteau .com Tel. +32 (0) 4 374 75 75 Fax +32 (0) 4 374 75 85	

All specifications are non contractual and are subject to change without prior notice