

**NEW**

*The evolution of our Constant Potential CLD Series, the XLD Series is built with the latest technologies and offers a very high power, steadiness, sturdiness and most important for every end-users: reliability!*

## BALTOGRAPH XLD160




High voltage range:	<b>10 to 160 kV</b>
Tube current range:	<b>0,5 to 12 mA</b>
Tube range:	<b>Up to 160kV</b>
Max. output power:	<b>650 or 1000 W</b>
Anode cooling type:	<b>Water</b>
Duty cycle:	<b>100%</b>
Insulation:	<b>SF6</b>
Voltage:	<b>230 V</b>
Operating temperature:	<b>Up to 50°C</b>
Weight:	<b>16,6 kg</b>
Drive frequency:	<b>30 KHz</b>
Control Unit:	<b>HAND-XD or XLP</b>

### MAIN FEATURES

- Latest generation technologies
- High frequency constant potential generator
- « Ripple free »
- High duty cycle
- Current up to 12 mA
- Metal-ceramic tube
- Stationary or mobile unit
- Full automatic preheating
- Very stable output



### X-Ray Remote Control software (XRRC)



*Controls all operations remotely, directly on the computer screen. XRRC is included as a standard with every XLD units.*

### KEY ADVANTAGES

- RS232 interface for computer connection
- Powerful, steadiness & sturdiness
- SF6 insulation HV module
- No oil insulation for hassle free maintenance
- Can be used with panoramic or directional x-ray tubes
- Can drive two individual filament


### MOST COMMON APPLICATIONS

- Tyre inspection applications
- Casting / Welding inspection
- Security
- Digital applications
- Aeronautical / aerospace / Transport
- Food inspection
- Military
- Bio-medical & agriculture


*The XLD160 is a 160kV constant potential generator, direct evolution of our well known CLD160. It has been specially designed and optimized for real time applications and offers an extremely high dose stability to produce quality images comparable to conventional X-ray films.*

*Lightweight and highly flexible, that makes it the ideal selection for all castings and medium walled steels.*

*Equipped with the HAND-XD or the XLP, the XLD160 will be very easy to use. Both control mode can be driven with the X-Ray Remote Control (XRRC) software.*

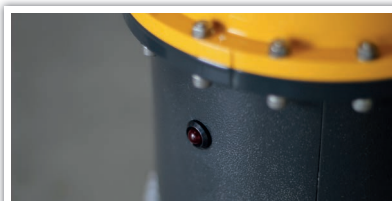

### MECHANICAL DRAWING

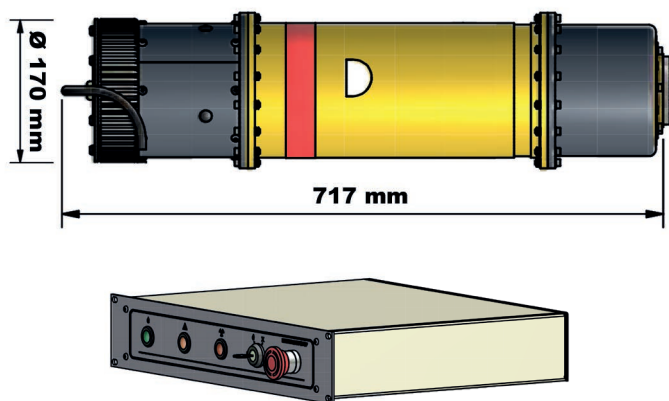

*The Baltograph XLD160 is a user friendly X-ray examination system. With accessories such as flat panels and Image Processing Software, this is the perfect digital solution.*

### INTERNATIONAL

- CE certified

Specifications	Units	XLD160
High voltage range	kV	10 to 160
Tube current range	mA	0,5 to 12
Tube range	kV	Up to 160
Ripple		0,1% PP
Maximum output power	Watt	650 or 1000
Frequency	Hz	47 - 63
Drive frequency	KHz	30
Operating temperature	°C	0 to 50°C
Output connector		R24
Duty cycle	%	100%
Insulation		SF6
Voltage	V	230 (-15% +10%)
Weight	Kg	16,6
Tubehead		Metal-Ceramic
Control mode:		HAND-XD or XLP

## 2 CONTROL MODES AVAILABLE

### HAND-XD (Stand alone & computer)



The Hand-XD is our well known control unit equipped with a wireless remote control for generators. The Hand-XD can also be controlled by X-Ray Remote Control (XRRC) software.



*XRRC is able to control all operations remotely, directly on the computer screen. Allowing you to interact with the mA, kV, start and stop the X-ray from running, view of the tube characteristics and state, start and stop preheating, choose tube focus, load exposure charts, etc.*

#### Main characteristics

- kV step: **1 - 2 - 3**
- mA step: **0,1**
- Casing: **Aluminium case**
- Weight: **9,5kg + 0,9kg (remote)**

### XLP (Computer only)



The XLP is made for those who don't need a control panel but only commands by computer. It includes all securities and the XRRC software and connection.

#### Main characteristics

- kV step: **1 - 2 - 3**
- mA step: **0,1 - 0,2 - 0,5**
- Casing: **19" rackable**
- Frequency: **47 - 63 Hz**

#### STANDARD EQUIPMENT

- XLD160 generator
- Tubehead : TSD or TSC 160kV
- Control unit : RC8 or XLP
- RS232 connection for XRRC (with XLP)
- A cable from the generator to the control panel
- A main power cable

#### OPTIONAL EQUIPMENT

- Warning flashing light with 20 m cable
- Closed circuit type water cooling unit
- Water security box
- Diaphragm for tubehead
- Shutter for tubehead
- Image Processing Software (IPS012)
- And much more

#### Produced by:

##### Balteau NDT

Rue Voie de Liège, 12  
B-4681 Hermalle Sous Argenteau  
Belgium

www.balteau.com  
balteau@balteau.com  
Tel. +32 (0) 4 374 75 75  
Fax +32 (0) 4 374 75 85

#### Distributed by:

